RUGGED COVER Installation Instructions

1. Place the cover on front of truck bed.
2. Secure front clamps.
3. Attach safety tether strap on both sides.

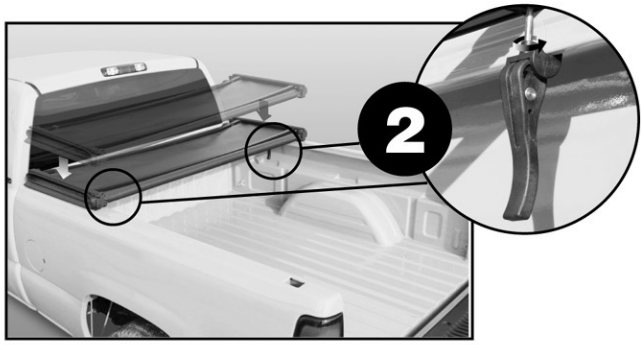

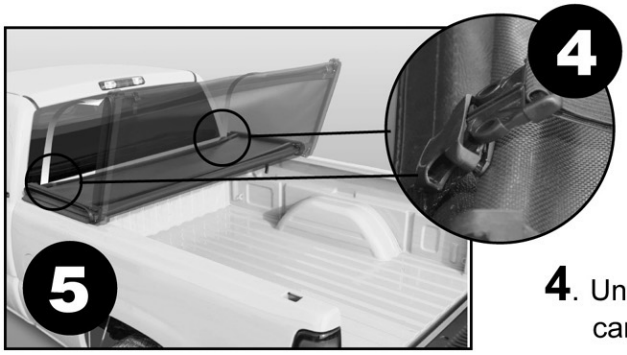

4. Undo both clips so cover can be unfolded.
5. Unfold first section.
6. Unfold second section.
7. Cover is laying down flat.
8. Secure rear clamps for a tight fit.
9. **All Toyota models with utility track.** Use aluminum block to attach cover by sliding into place and locking clamps on to blocks.

2&7. To clamp cover down, put lip of clamp under side bed rail and push handle down. **(See D1, D2, D3)**

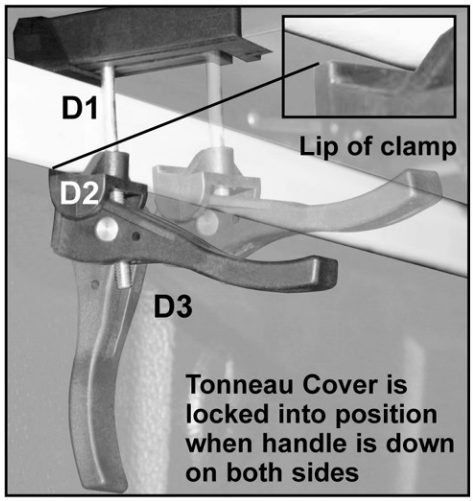

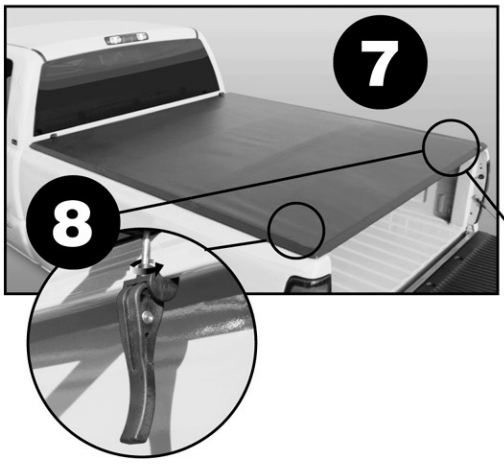

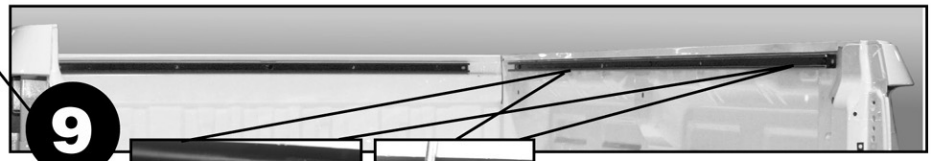

Sliding Locking Clamp

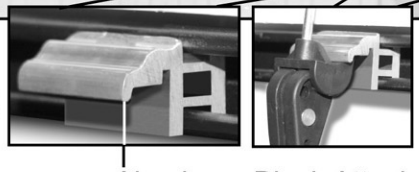

Aluminum Block Attachment lip must point down.

10. Use extra foam for any gaps when tonneau is used without bedliner.

951 Aiken Rd. • Owosso, MI 48867
989-725-8354 • Fax: 989-725-8409
www.ruggedliner.com

FOR MORE INFORMATION CALL
1-800-433-3604
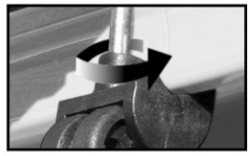
How To Adjust Clamps
- The clamps might need adjusted.
- To adjust, turn handle on clamp clockwise to tighten or counter clockwise to loosen.